
## **NISSAN INTEGRATED NAVIGATION INSTALATION OVERVIEW**

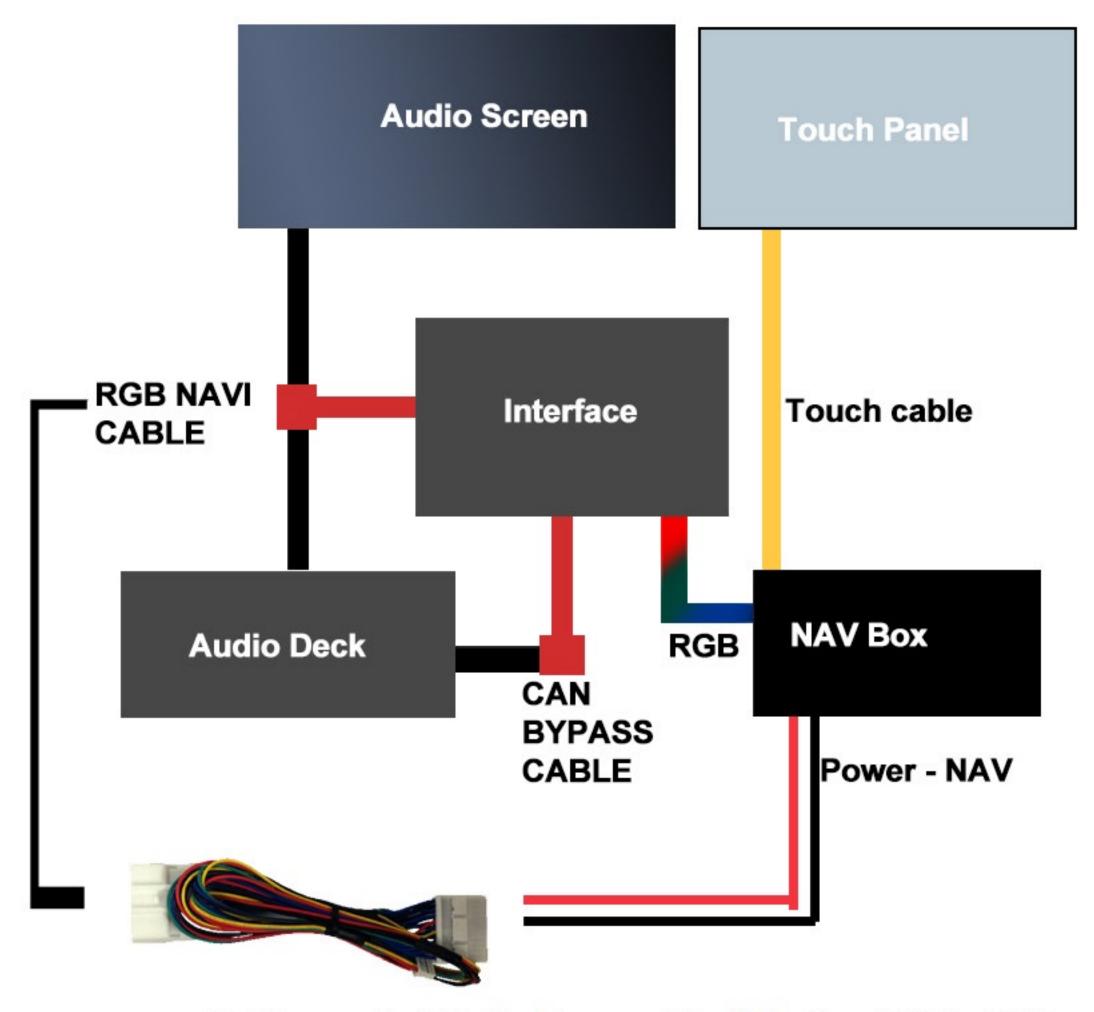

Navi Power cable (6 Pin) Red -> connect it to 'Yellow' from RGB Navi Cable Navi Power cable Black -> connect it o 'Black' from RGB Navi Cable



**INFINITI FX35** 



**NISSAN ELGRAND (E62)** 



**MURANO & PATHFINDER** 



**NISSAN PATROL** 

DIP SW 1: ON: Skipping RGB Mode

OFF: RGB Display (Nav)

DIP SW 2~6 : Not Assigned DIP SW 7&8 OFF : Infiniti FX35 DIP SW 7&8 ON: Nissan PATROL

DIP SW 7 OFF 8 ON: Nissan ELGRAND DIP SW 7 ON 8 OFF: Nisan MURANO

&PATHFINDER

## 1. Open the Audio monitor



Pull out the trim in front of the screen



Remove bolts



Remove control panel trim





Pull out panel trim (do not disconnect any wires)




Remove bolts those holding Air Con trim



Pull out Air Con trim



Remove those 2 bolts, that holding bottom panel trim

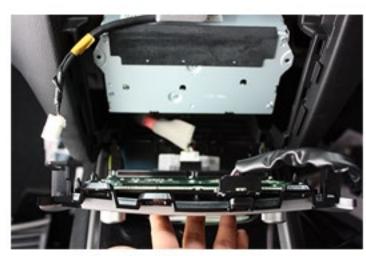

Pull out bottom panel (Do not disconnect any wires)



Remove 4 bolts those holding audio & monitor (the bracket)



Remove the bracket



Under the audio, remove those bolts that holding audio deck.



Pull out Audio deck and disconnect Main / CAN cable & RGB Cable



Pull out the Main cable (24Pin)



Conect provided bypas CAN cable to audio deck's Main cable



From bypass cable, conect Can port (2Pin) to the Interface box.




Do the same with 24Pin RGB cable to back of the monitor. Both 24 Pin & 32 Pin cable will be connected





Connect provided RGB cable betwen Interface & NAV boxes

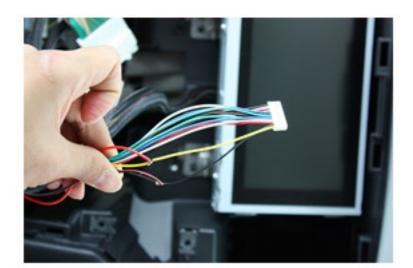

From NAV Power cable (6pin), connect NAV Red to RGB (from 24pin main cable) Yellow and NAV Black to RGB Black



From NAV power cable (6pin). connect Nav Yellow to marked wire \*Use test light to confirm the power.

## 3. Touch Panel Installation




Check the dimension of the screen



Once the panel has modified to the screen size put it over the screen. Make sure Touch Film faces top.



Double check the size and fitting.

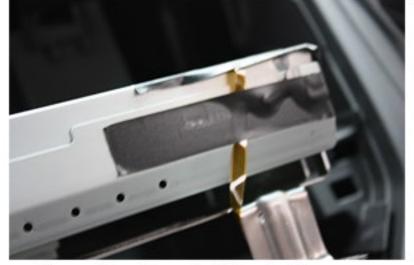

Tape the touch film to the monitor.



Conect it to the touch cable and conect it direct to the NAV box



Tape the socket to the monitor.



DIP SW for NAV Box:

1,2,4 must be OFF (Down) all the time.

3 Must be ON (Up) all the time



Return to Audio

Mode change to Nav (Press and hold 1 sec)

3 second Audio display then back to Nav